



- 1、Search the clocks
- 2、Click the clock needs to be updated
- 3、Click “system information”
- 4、Choose the firmware
- 5、Click “Modify”

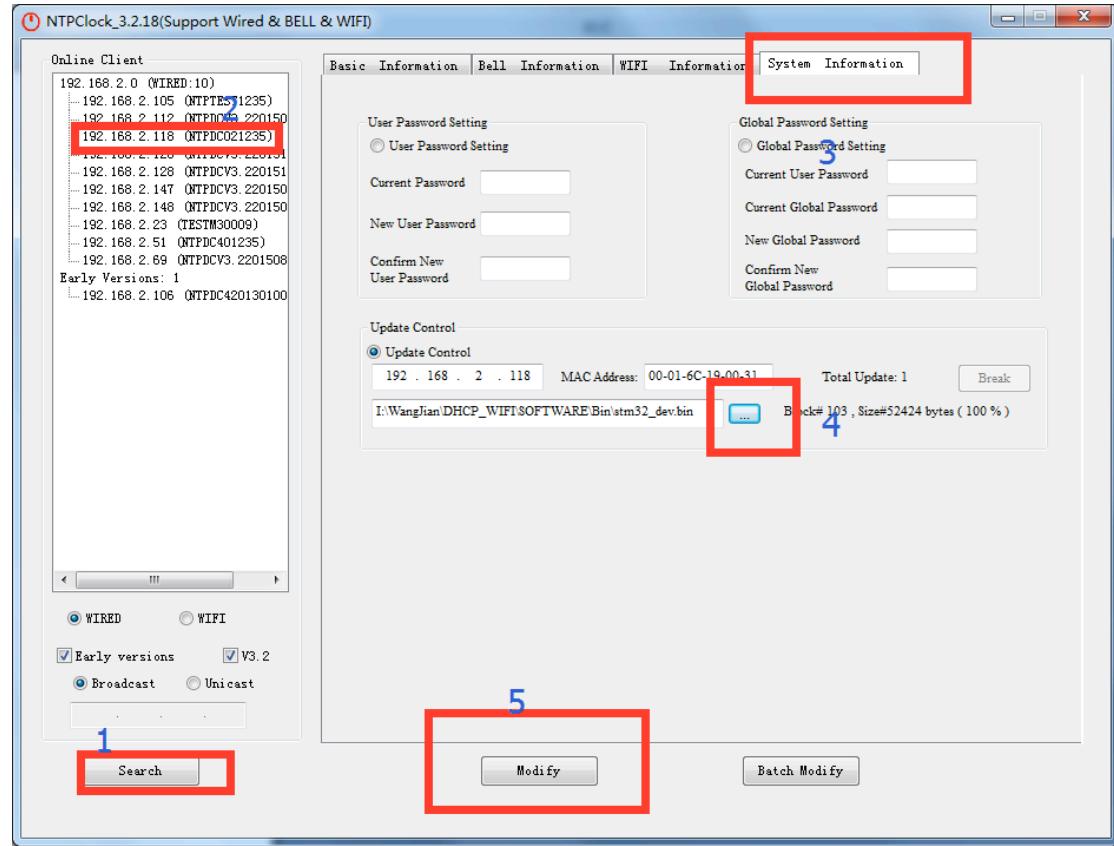

- 6、The following interface means the updating is successful.

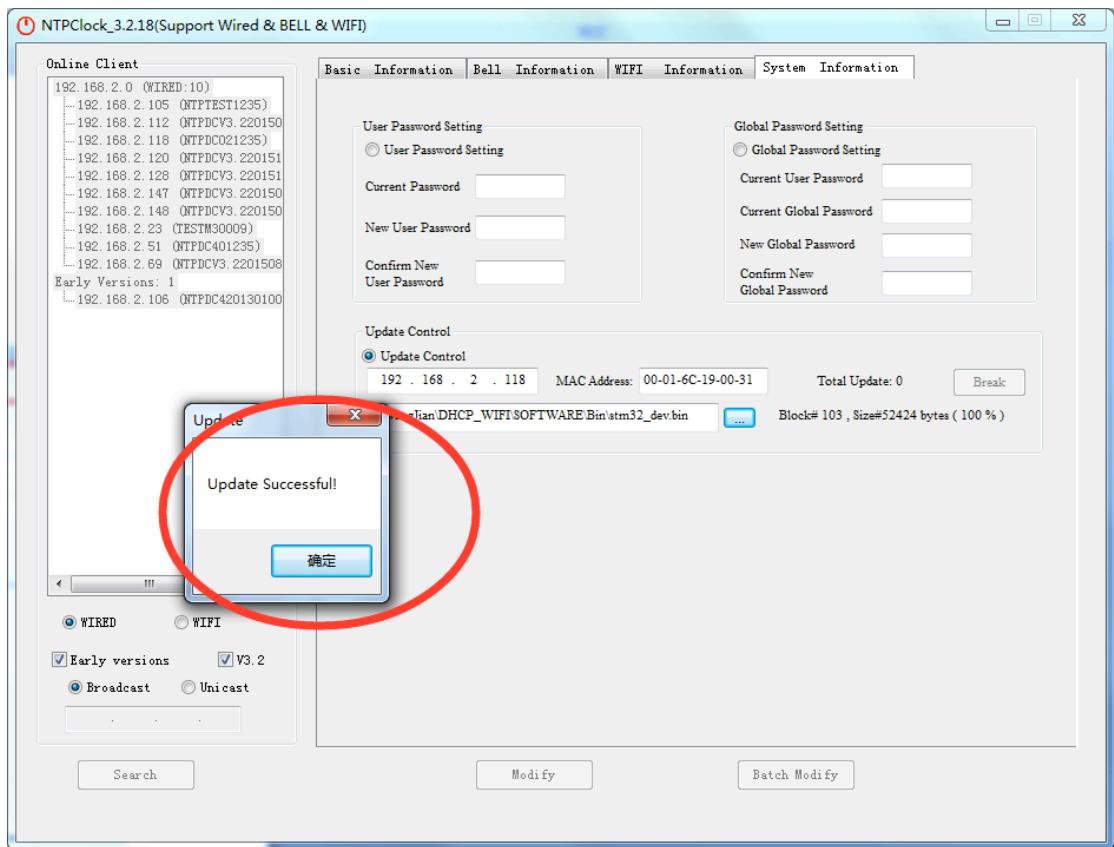

Remarks:

1. During the updating, the network and power should be OK.
2. Set the Clock to static IP address, record the mac address, incase the updating is unsuccessful.
3. If the updating is unsuccessful, pls use 18V power adaptor, and connect the clock to the PC directly.